

Maintenance and check item list for the BilgMon 488

Parts name	Maintenance period	Replacement period
Confirmation of LOG	Every after operation.	-
Function Test	Every month.	Confirmation of Operation. Refer the Instruction Manual.
Cleaning Sensor	Every 3 month.	Remove sensor cap of Sensor Unit, and clean the Sensor by using citric acid and a soft brush. Then, wash away by water.
Seal of Sensor Unit	Every 3 month.	Check if the seal is broken.
ZERO calibration	Every year.	Refer the Instruction Manual.
Voltage check of Back-up Battery	Every year.	When voltage drops down to 2.7VDC, to be exchange with a new one.
Calibration of Sensor Unit	By the expiration date of the calibration certificate.	To be <u>exchange with a new Sensor Unit</u> that calibrated by the manufacture, before the expiration date of Calibration Certificate.